























PTS/PTU Series Tube Infrared Heaters

Solutions For Commercial & Industrial Heating Since 1949



Push Through System (Positive Pressure)

- Products of combustion are pushed through the combustion chamber
- Tube Integrity Safety System (TISS™)
- No draft hoods, totally enclosed combustion chamber
- Blower motor totally enclosed in the burner box. Ideal for applications where minimal noise (less than 50dB) is desired
- Heavy duty permanently lubricated, ball bearing blower motor for maintenance-free operation

Burner System

- Heavy-duty cast iron burner & 10-year limited warranty on burner
- Heavy-duty silicone-gasket construction used throughout
- Inside or outside air for combustion
- Up to 40 ft. outside combustion air duct capability
- Standard 4" combustion air collar
- Direct spark ignition system & 100% gas shut-off safety control
- Pre-purge and post-purge function
- State-of-the-art step opening redundant combination gas valve for quiet ignition and added safety
- Diaphragm air switch for proof of venting
- Diagnostic monitoring light system & burner inspection sight glass
- 36" stainless steel, flexible gas connector included with burner
- Line voltage or external 24V thermostat connection

Radiant Emitter Tube System

- 4" O.D. heavy-duty calorized aluminized steel or alumi-therm steel combustion chamber (10 feet) and heavy duty hot-rolled steel radiant emitter tubes
- Optional calorized aluminized steel (ALC) radiant emitter tubes
- 5-year limited warranty on the emitter tubes
- Suitable for horizontal or angle mounting up to 45°
- Optional 90° elbows
- Up to 40 feet sidewall vent capability
- Vented or indirect vented operation


Reflector System

- Highly efficient aluminum reflectors with reflectivity rating of 97.5%
- Standard end reflectors
- Optional corner, side and U-bend reflectors
- Optional decorative grille
- Individual reflectors can be rotated up to 45° to direct heat where needed
- Easy-to-use mounting brackets and wire hangers

TISS™

Tube Integrity Safety System

In the unlikely event of a tube failure, TISS™ has been designed to automatically shut-off the heater, providing greater safety and piece of mind.

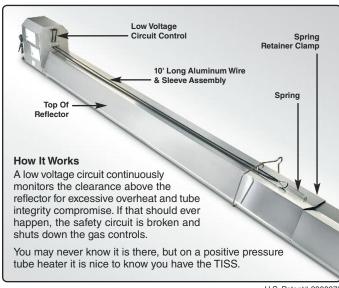



*Indicate model number based on Btu/hr input (e.g., 100,000 Btu/hr), total emitter length, (e.g., 40 feet) and gas type (e.g., natural gas single stage input).

The unit selection for a straight tube would be PTS100-40-N5 and for a U-tube would be PTU100-40-N5. **Available only on PTS models.



CONTROL SUFFIX	TYPE OF GAS	DESCRIPTION			
N5 / L5	NATURAL / PROPANE	SINGLE STAGE GAS VALVE - SINGLE STAGE INPUT			
N7 / L7	NATURAL / PROPANE	TWO STAGE GAS VALVE - MODULATING INPUT - HIGH/LOW FIRE			




ALC Option: All calorized aluminized steel (ALC) radiant emitter tubes for ALC option the model number would be PTS100-40-ALC-N5. Note: for car washes, dairy barns, greenhouses, swimming pools, waste water treatment plants, and other high humidity/corrosive environments, the ALC option with all calorized aluminized tubes is recommended.

GAS TYPE	BURNER PRESSURE	SUPPLY PRESSURE MIN MAX		GAS CONNECTION	VOLTAGE	AMPS	IGNITION TYPE	FLUE CONNECTION	OUTSIDE COMBUSTION AIR CONNECTION
NATURAL	3.5" W.C.	5" W.C.*	14" W.C.	1/2" MPT	120 VAC 60 HZ	1 2	1.8 DIRECT SPARK	4" ROUND	4" ROUND
PROPANE	10" W.C.	11" W.C.	14" W.C.	1/2 IVIP1		1.0			

Note: For installations higher than 2000 ft above sea level, please consult the factory regarding recommended derating of heaters. *7" W.C. for PTS/U150-200



Checkout area of national grocery chain

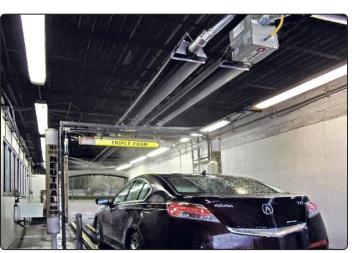

Car wash application with ALC Option

PTS/PTU Mounting Height, Clearances & Dimensions

Minimum Recommended Mounting Heights


MODEL	HEIGHT AT HORIZONTAL	HEIGHT AT 45° ANGLE		
PTS/U 40	10 FEET	9 FEET		
PTS/U 50	11 FEET	10 FEET		
PTS/U 60, 75	13 FEET	12 FEET		
PTS/U 100	14 FEET	13 FEET		

MODEL	HEIGHT AT HORIZONTAL	HEIGHT AT 45° ANGLE		
PTS/U 125	14 FEET	13 FEET		
PTS/U 150	15 FEET	14 FEET		
PTS/U 175	16 FEET	15 FEET		
PTS/U 200	18 FEET	17 FEET		

This chart is intended as a guide only, as heaters may be mounted at various heights and angles. Since straight tube heaters are always hotter at the burner end than at the exhaust end, always observe the minimum recommended mounting heights shown above and mount heaters as high as possible. Use PTU series for spot heating.

Please consult your local Space-Ray Representative for a detailed analysis of your particular infrared heating requirements.


Minimum Clearances To Combustibles

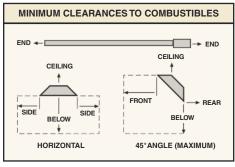


MODEL NO.	SIDE	CEILING*	BELOW**	END	45° FRONT	45° REAR
PTS/U 40	22"	6"	52"	15"	40"	12"
PTS/U 50	22"	6"	56"	15"	48"	12"
PTS/U 60,75	22"	6"	60"	15"	52"	12"
PTS/U 100	28"	6"	70"	15"	58"	12"
PTS/U 125	28"	6"	76"	20"	66"	12"
PTS/U 150	34"	6"	81"	20"	70"	12"
PTS/U 175	38"	6"	86"	20"	75"	12"
PTS/U 200	42"	6"	93"	20"	80"	12"

*When used indirect vented, clearances to ceiling must be: 12" for PTS/U (50-75), and 18" on PTS/U (100-200). If optional corner or U-bend reflectors are not used, the clearance must be 18." **Minimum clearance below reduces by 50% once you are 25 ft. downstream from the burner box. Note: Consult factory if reduced clearances are required.

Dimensions

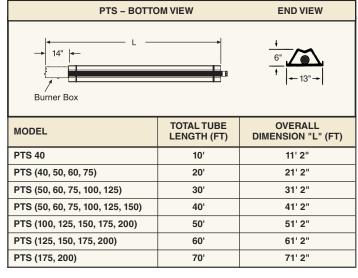

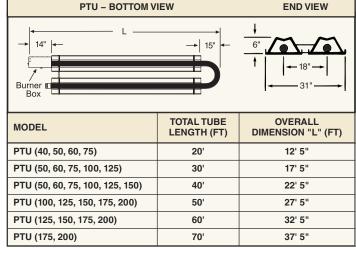

Combustion Air And Ventilation

Combustion air and venting requirements for all gas-fired heating equipment must be provided per the National Fuel Gas Code NFPA54 or the authority having jurisdiction over the installation. In contaminated atmospheres or high humidity areas, optional outside air for combustion can be supplied. Heaters can be common vented, vented, or indirect vented. Refer to the Installation and Operation Instructions for further information. A vented installation must be vented to the outside of the building with a flue pipe. An Indirect vented installation requires a minimum ventilation flow of 4 CFM per 1000 Btu/hr of total installed heater capacity on natural gas by either gravity or power ventilation (4.18 CFM per 1000 Btu/hr for propane). For indirect vented applications, building exhaust openings must be located above the level of the heaters and inlet air openings must be located below the level of the heaters.

For Your Safety

OPERATE SPACE-RAY GAS INFRARED HEATERS WITH PROPER CARE AND OBSERVE ALL SAFETY PRECAUTIONS. Installation and service must be performed by a licensed contractor. The installation must conform to Manufacturer's Installation and Operating Instructions or local codes. In the absence of local codes, the installation must conform to the National Fuel Gas Code ANSI Z223.1 (latest edition, also known as NPFA54) or CAN / CSA-B149 installation codes (latest edition).



P.O. Box 36485 • Charlotte, NC 28236 • Telephone (800) 438-4936 • (704) 372-6391 • Fax (704) 332-5843